


LIAM WALL PEG


Installation Guide

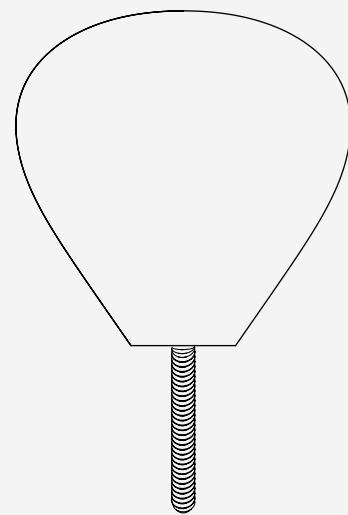


BEFORE INSTALLATION

Read through all assembly instructions once before beginning. Two people are not required for assembly, but it is recommended. Carefully unpack the mirror and inspect for damage. Please check that you received all of the components pictured in this guide. If anything is missing, please contact, shopkeeper@lostine.com, and one of our customer service representatives will be able to assist you.

COMPONENTS INCLUDED

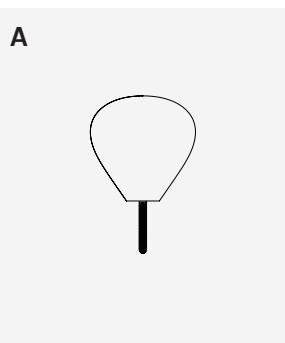

A

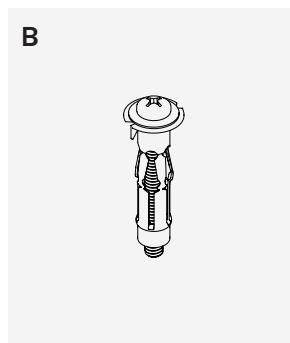


B

*Part A shown with Acorn configuration.

Peg
x 1


Wall Anchor
x 1

NOT INCLUDED

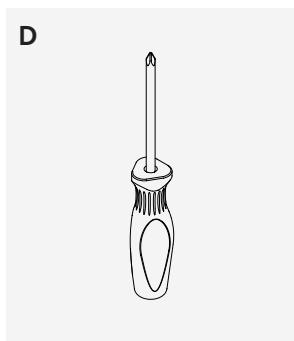


D

Phillips Head Screwdriver
x 1

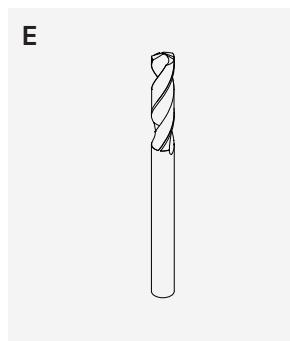

E

7/16 Drill Bit
x 1


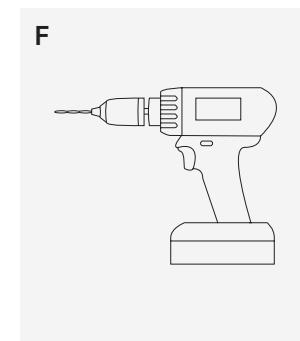


F

Drill
x 1



MOUNTING GUIDE

1. Mark out the spot where you wish to hang the peg on your wall. (Note: the kit included with your wall peg is for mounting directly into drywall, not a wooden stud).
2. Drill a 7/16" hole using a 7/16" drill bit on your mark (drill bit not included).

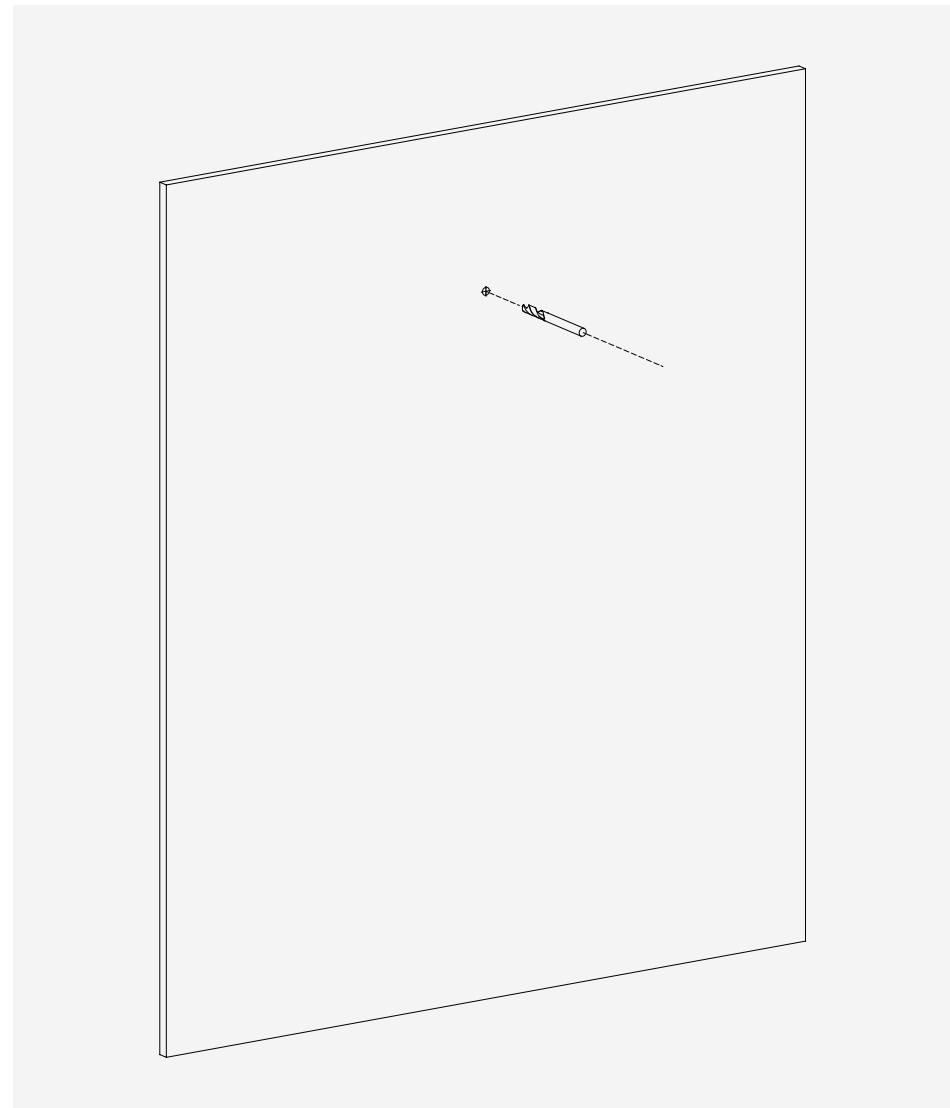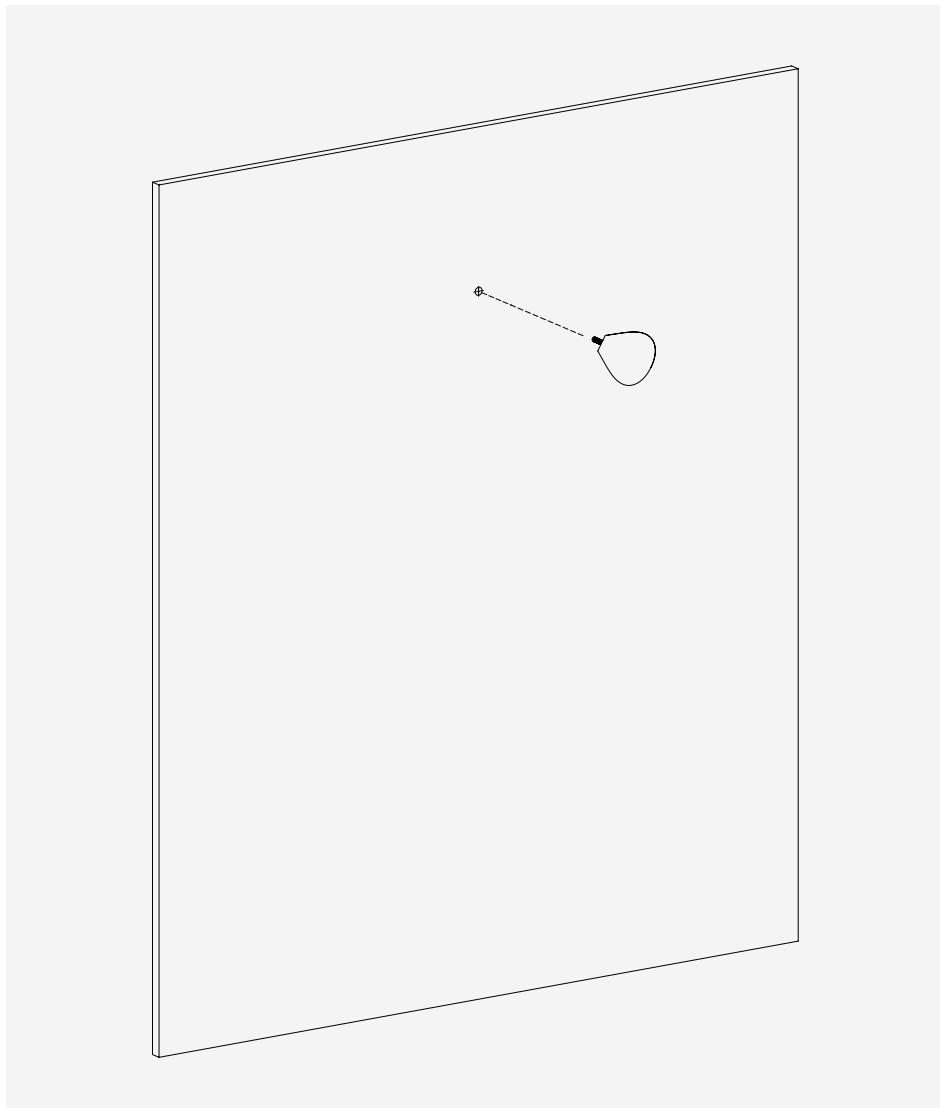


MOUNTING GUIDE

- 3 Gently tap the anchor into the hole (do not remove the silver bolt from the anchor, it is used to tighten the anchor into the wall).
- 4 Once anchor is tapped in, use a phillips head screwdriver to turn the anchor's bolt clockwise until you feel resistance; this signifies that the anchor has expanded and is firmly mounted. (Note: using a power drill reduces your ability to feel when the anchor is tightened properly).

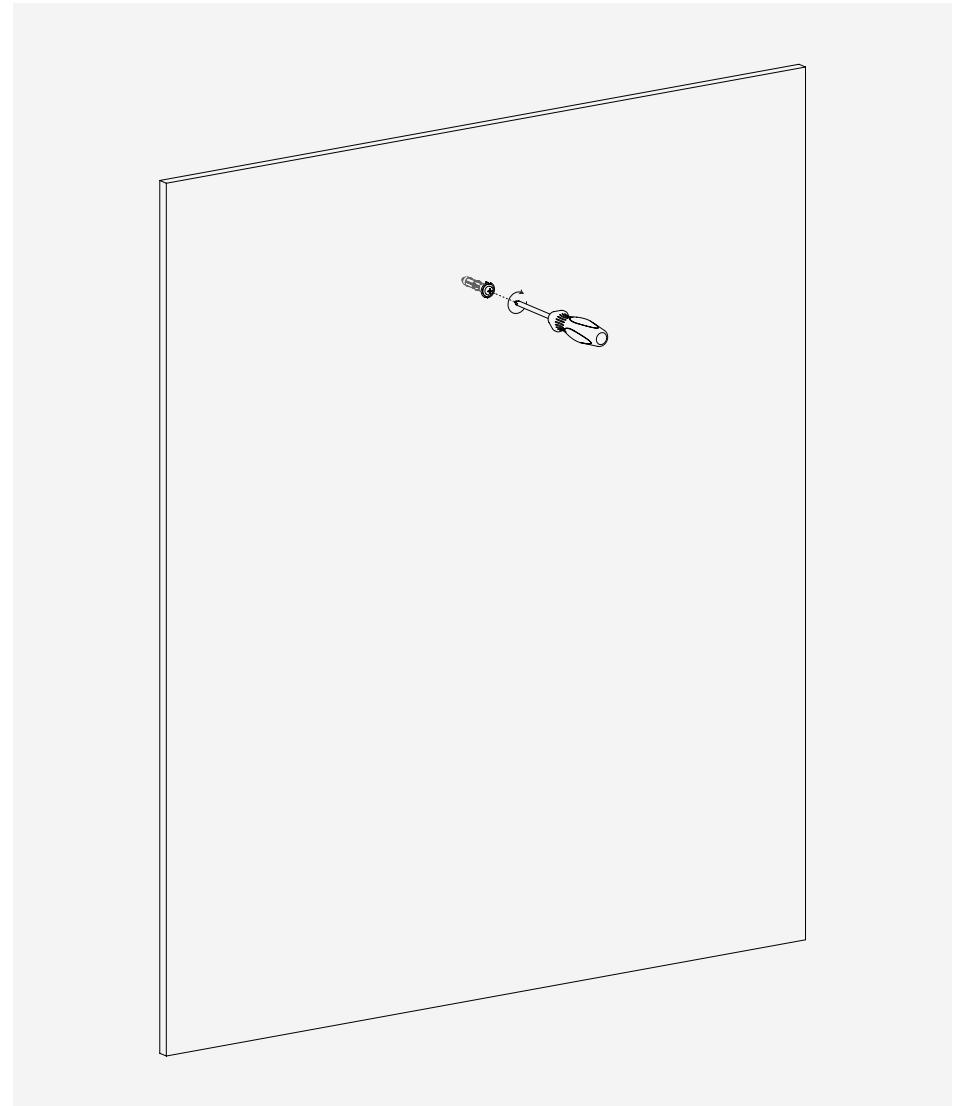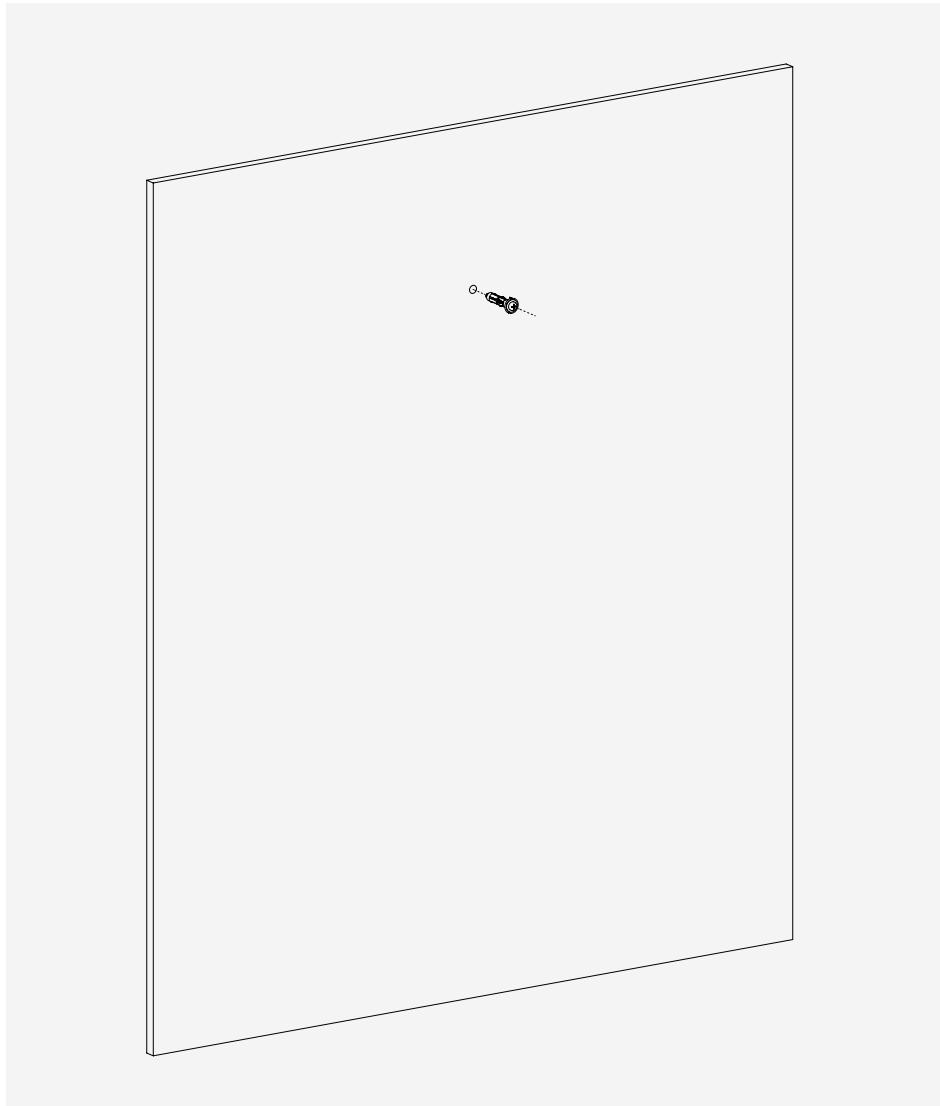

MOUNTING GUIDE

5 Remove the anchor's silver bolt.

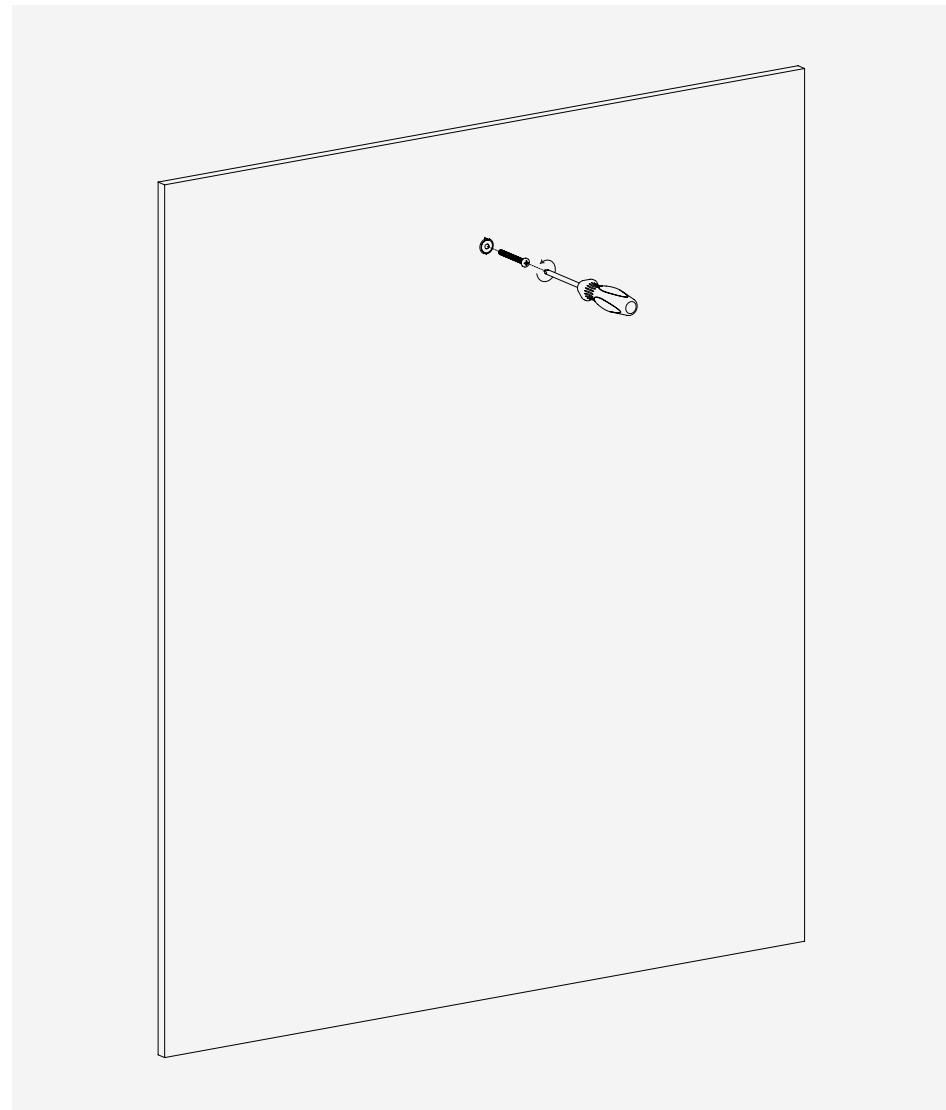

6 Thread in the peg until it is flush against the wall.

